



Norvado TV User Guide - Amazon Fire TV

Use this guide in conjunction with your
Amazon Fire Device

Adding the Norvado TV App to your Amazon Fire TV

To add the Norvado TV app to your Amazon Fire device, press the **Home** button and navigate left to the search magnifying glass. Type in or use Voice Search to enter **Norvado TV**.

Select and click the **Get** button to download the app. Once the installation is complete, you will be prompted to **enter a Login and Passphrase**. If you haven't received these, please contact our office. After entering the Login and Passphrase, press **Save** and you're ready to stream.

Navigating the App Content and Lists

Pressing left, right, up or down on the remote circle will highlight specific items. Pressing in the center of the remote circle will open a highlighted item. To return to the Home screen, press the **Home** button. Press the **Back** button to move back to the previous screen.

Watching Norvado TV

From the Home Screen, use the remote to **highlight and expand the Norvado TV icon** and **press the center of the remote**. This action will open your on-screen Program Guide. To watch a channel, press up or down on the remote ring to any program highlighted in Blue and press the **Play/Pause** button to view a currently-airing program.

Channel Surfing

While watching a currently airing program, **press the top of the remote circle** to view the next higher numbered channel. **Press the bottom of the remote circle** to view the next lower numbered channel.

Enter Channel Number Feature

 


From the Program Guide, **press and hold the center of your remote ring** to open a screen that allows you to enter a specific channel number and then select **Next** to move to that channel number in the Program Guide.



Rename Your Amazon Streaming Device

To simplify your streaming experience and avoid the “now which TV does this device belong to?” question, you may want to clearly identify your streaming devices. Follow the steps below to complete the process of renaming your devices at setup.

1. When in the Norvado TV App, arrow up to get to the list across the top of your TV.
2. Navigate to **Account**. Arrow down to **Device Name** and **highlight the pencil icon** to edit.
3. **Change the name** either by using the arrows to find the letters on the keyboard or by scanning the QR code with a smartphone to allow you to utilize the keyboard on your device to type out the name.
4. Once you have entered the name, click **Next**.
5. Once back under the Account, you will see the new device name.

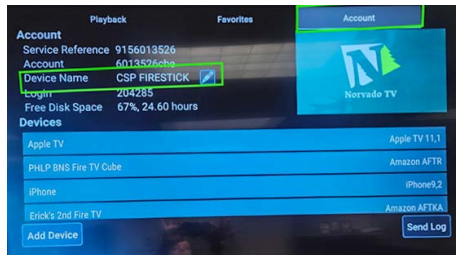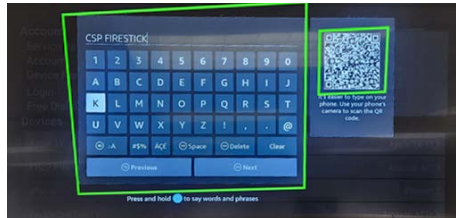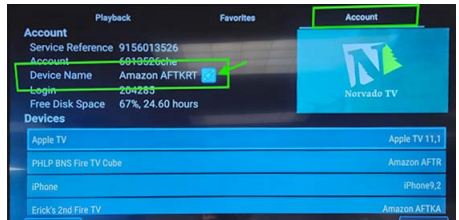

Fast Forward and Rewind Features

There may be times when you want to go back and see that exciting play in the game or fast forward through commercials - don't tell the advertisers.

To use this feature during an in-progress or recorded program, press the **Fast Forward button** on your remote control to advance the program, and press **Rewind** to go back. The Progress Bar lets you track your movement through a program, and the timer helps you to see how far you are from the end of the program.



Program Search Feature


You can use the Search feature to find Live, Recorded, and Future programs. From the Program Guide, press the **Back** button to open the Tab Bar, **scroll right to the Search feature**, **press on the lower part of the remote ring**, and then **press the right side of the remote ring** to open a typing pad.

You can manually type in a program search by typing in letters of a program that you are searching for. To use the voice search, press and hold the **Microphone** button while saying the name of the program you are looking for.

The results will be more specific if you type in or pronounce more letters in the name of the program. You can also use the search feature to find specific types of program, like a program with the name "Today" in the title.


To view your search results, highlight **Next** on the keypad and **press the center of your remote**. The search results will show currently airing or upcoming programs in the top row. **Highlight a program, press the center of your remote, and then select Watch** to view the program or **Record** to add this program to your future recordings.

The bottom row will show programs that have been recorded or future recordings. **Highlight a recorded program** you want to watch and **press the center of the remote** to watch the program. You can also select **Delete** if you want to remove the program from your recordings.

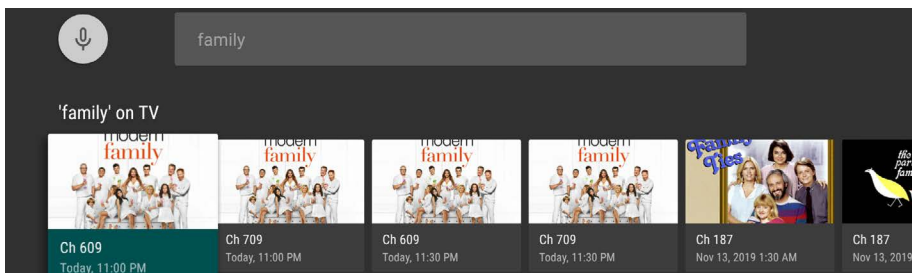

Restart TV

This popular feature lets you go back to the beginning of any currently-airing or in-progress recorded program that has the Restart Option. While watching live TV, **press on the upper part of the remote ring** to open a program Play bar. **Press on the upper part of the remote ring a second time and scroll right to highlight the Restart button. Press the center of your remote** to restart the program from the beginning.

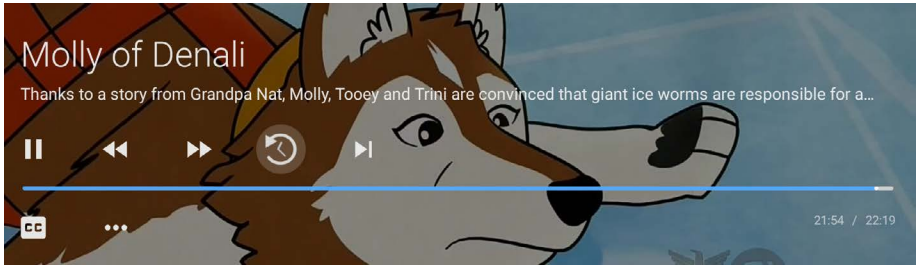

Programs that have the Restart option display a Green Restart icon in the program description. There may be programs because of programming restrictions that don't allow for the Restart function.

Watching In Progress Recordings

If you would like to watch an in-progress recording from the beginning, for the best experience use the Restart feature.

Pause Live TV

Life happens and there may be times when you need to take care of something while watching your favorite program. While watching live TV, **press the Play/Pause button** on your remote once to pause the program. After you have let the dog out, raided the refrigerator, or completed any other task, just **press the Play/Pause button one more time** to continue watching your program.

Quick Guide

During a recorded or live program **press the lower part of the remote ring** to pull down a menu list of your most recently-watched channels. **Scroll left or right** to choose a new channel and press the center of your remote to watch it.

On-Screen Guide Management

From Home Screen, use the remote to **highlight and expand the (Service Name) icon** and **press the center of the remote**. This action will open your on-screen Program Guide. **Press Up, Down, Left or Right** to scroll through your channel lineup. Pressing the center of your remote on a highlighted program will open a program screen with detailed information about the program. This screen will also display Watch, Record and Search options.

To Watch, use your remote to **highlight the Watch button** and **press the center of your remote**. To Record a program, **highlight the record button** and **press in the center of your remote ring**. See the **Record Your Programs** section of this guide to learn more about recording programs. Choose the **Search** feature if you want to see future dates and times that this program will air or programs that have been recorded or scheduled for recording.

The screenshot shows the on-screen program guide for "The Kelly Clarkson Show". At the top, the title "The Kelly Clarkson Show" is displayed in white. Below it, the broadcast information "Today, November 12, 3:00 – 4:00 PM" is shown, followed by a green "New" icon and a "TV-G" rating. A description of the show is provided: "Musician Jason Derulo; comic Nicole Byer; Kelly lets a woman borrow her chair from 'The Voice' to find a blind date; Kelly interviews a couple who were involved in a viral proposal; Kelly covers Post Malone's song...". To the right of the description are three blue buttons: "Watch", "Record", and "Search". Below the description, the text "Also On" is followed by the KSFY abc logo. At the bottom, there are three program thumbnails: "The Ellen DeGeneres Sh.." with a picture of Ellen DeGeneres, "ABC World News Tonig.." with a picture of a news anchor, and "Wheel of Fortune" with a picture of the show's hosts.

Recording Programs From the Guide

Select an upcoming program, **press the center of your remote**, **highlight the record button** and **press the center of your remote** to make a recording of this program. See the **Recording Your Programs** section of this guide for Recording instructions.

Tab Bar

From the Program Guide, **press the Back button** on your remote to open the Tab Bar. The Tab Bar allows you to scroll Left or Right to access the Guide, Recording, Search, and Settings options. Details on the Recording and Search options will be covered in subsequent pages of this guide.

Adding New Devices to Your Service

Before you add a new device to this service, go to **Settings** in your Tab Bar from an activated device, **scroll down** and **highlight Add Device**. **Press the center on your remote to generate a Login and Passphrase** for the new device. Follow the directions at the beginning of this guide for adding this service to your new Amazon device, and use the displayed Login and Passphrase when you are prompted to activate this service.

Recording Your Programs

Making a Recording

When you select Recording, a screen will display that gives you the options for setting a Recording Series rule for this program. You can record only new episodes (Series - New Only), record all episodes of this program (Series - All), or a One-Time recording of this program. To further manage this recording, **go to the Tab Bar and select the Recordings option**.

Watching Your Recordings

Recordings can be viewed from either the Recordings or Search screen options. **Select Recordings from the Tab Bar** to open the Recordings screen. Here you will see a list of your Current Recordings. **Scroll through the list, highlight the program you want to watch, and press the Play/Pause button** to start watching the program. If there are multiple recordings, scroll and highlight the one you want to watch and press the Play/Pause button to start watching the program.

From any of your Search options, you can see a list of recordings for a specific program by highlighting and pressing on the Search button. This screen will display a list of current or future scheduled broadcasts of this program in the top row. Scroll down to the second row to highlight the list of recorded programs. If the highlighted program has been completely recorded, press the Play/Pause button on your remote to play the recording.

Managing Your Recordings

Current Recordings

 
To watch or delete current recordings, **go to the Tab Bar and select the Recordings option**. This screen will display the list of your recorded programs. **Scroll up or down and press on the highlighted program that you want to manage**. Scroll up or down to highlight a program and **press the Play/Pause button** to watch the program. The Checked Red circle to the left of the program indicates that it has not been watched while programs with a Red Play

Button have been partially watched. **Press Play/Pause on a partially- watched program to view the program where you left off.** From this list you can either watch or delete your recorded programs by highlighting the Watch or Delete option. If you choose to Delete a program, you will receive a prompt asking to confirm your deletion.



Future Recordings

Use the Future Recordings feature to manage settings for your future recordings. **From the Recordings screen, press the center of your remote control twice, and from the dropdown, choose Future Recording** to see a list of programs you have scheduled for recording. **Scroll through the list, highlight, and press the center of your remote to open a Future Recording that you want to manage.** To ensure that you don't miss the beginning or ending of a program, **highlight Edit and press the center of your remote to open a Recording Options screen. Highlight and press the center of your remote to edit the Start and End Recording times for the program. Scroll up or down and press the center of your remote to adjust the time when you want your recording to start or end.** Once you have finished your changes, **highlight Save and press the center of your remote to save the changes. To delete a Future Recording, highlight Delete and press the center of your remote, to receive a prompt asking to confirm your deletion.**

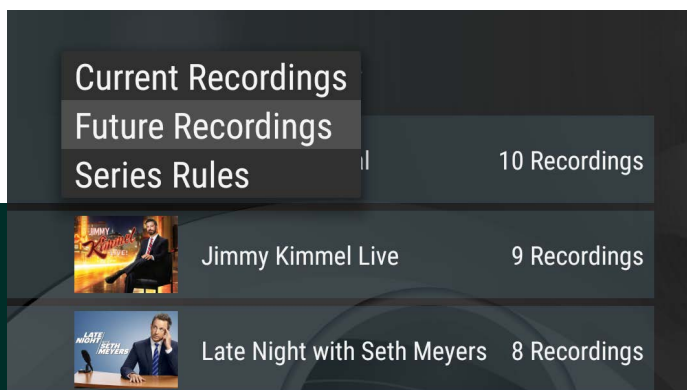

Series Rules

Use the Series Rules feature to manage the episodes of a series that you want recorded automatically.

From the **Recordings** screen, **press the center of your remote twice**, and from the dropdown, choose **Series Rules** to see a list of series programs you have scheduled for recording.

 
Scroll through the list and highlight a series that you want to manage. Highlight **Edit** and **press the center of your remote** to open a Recording Options screen.

Scroll up or down and press the center of your remote to choose **Recording Type**, **Keep At Most**, **Start Recording**, or **End Recording** options.

Recording Type lets you keep All Episodes or Only New Episodes. **Keep at Most** lets you choose a maximum number of episodes that you want to keep of this series, or you can choose to keep **All Episodes**.

The **Start and Stop Recording times** option works the same way as it does in Future Recordings. Once you have finished your changes, highlight **Save** and **press the center of your remote control**.

You can also delete all of the Series Rules for a program by highlighting the **Delete** button and **pressing the center of your remote**. *This only deletes the Series Rules and does not delete the Series Recordings.*

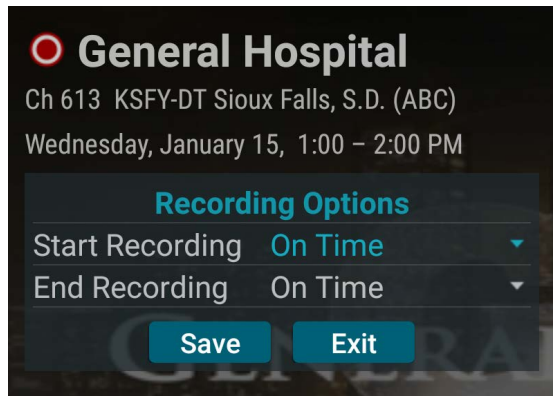

Questions?

Call 800-250-8927 or visit
help.norvado.com

